Feature 1/2.9" 2.1M Progressiv EX-SDI, HD-SDI, TVI, A 2D&3DNR / ACE(D-WE WDR(Wide Dynamic R 0SD, Sense-up x 32 Specification	re Scan Color CMOS Sensor HHD, CVI (1080P) / CVBS Selectabl DR iange)
Item	JMF-G511W-Mk2
Imaging Sensor	1/2.9" 2.1Megapixel CMOS Sensor
Scanning System	Progressive Scan
Number of effective pixels	1985(H) X 1105(V) = 2,19M(pixel)
Total number of pixels	2001(H) X 1121(V) = 2,24M(pixel)
S/N Ratio	More than 50dB(AGC off)
Video Output Mode	1080P (1920 X 1080) 25P
Video Output Level	EX-SDI2.0, EX-SDI1.0, HD-SDI AHD, HD-TVI, HD-CVI(1080P) / CVBS
Lens	3.6mm Fixed Lens
Min. Illumination	1.0Lux(Color), 0.5Lux(BW), 0.02Lux(Sens-up x32)
0.S.D	Built-in
Electronic Shutter Speed	AUTO / FLICKER / Manual(1/25~1/25000)
Sens-up	OFF, X2 ~ X32
AGC	1 ~ 10 Step
Backlight Compensation	OFF / HLC / BLC / WDR
WDR	LOW / MIDDLE / HIGH
Day & Night	AUTO / COLOR / B&W / EXTERN
White Balance	AUTO / AUTOext / PRESET / Manual
DNR	OFF / LOW / MIDDLE / HIGH
GAMMA	0.45 / 0.55 / 0.65 / 0.75
ACE(D-WDR)	OFF / LOW / MIDDLE / HIGH
DEFOG	OFF / LOW / MIDDLE / HIGH
Privacy Masking	On / Off (16 Zone Selectable)
Motion Detection	On / Off (4 Zone Selectable)
Language	ENG / CHN / CHN(S) / JPN / KOR
Protocol	Pelco - D / P
Communication [OPTION]	RS - 485[Baud Rate : 2400,4800,9600,57600,115200]
Operating condition	-10°C~ +50°C, under 90% humidity
Supplied Voltage	DC12 ±10%
Power Consumption	Max. 150mA



Function Menu				3
<u> </u>)	Function Menu		
IRIS	■ ELC			
FOCUS ADJ	■ OFF	■ ON		
	BRIGHTNESS	SHUTTER	SENS-UP	AGC
EXPOSURE	■ RETURN			
BACKLIGHT	OFF	■ HLC	■ BLC	■ WDR
DAY & NIGHT	AUTO	COLOR	■ B/W	EXTERN
COLOR	AWB	COLOR GAIN	MAIN OUTPUT	RETURN
DNR	OFF	LOW	MIDDLE	■ HIGH
	■ SHARPNESS	GAMMA	MIRROR	■ FLIP
IMAGE	ACE	DEFOG	PRIVACY	RETURN
MOTION	OFF	ON		
	OUTPUT	■ FRAME RATE	FREQ	COM.
SYSTEM	IMAGE RANGE	COLOR SPACE	AUDIO MIC	COLOR BAR
	■ LANGUAGE	■ CAM TITLE	RESET	RETURN
EXIT	SAVE	CANCEL		
IRIS Using this function, 1. When the SETUP m so that the yellow b	, you can select DC Lens or enu screen is displayed, us ar indicates 'IRIS'.	Manual Lens.	ngs.	
2. Select the connected	lens type by using Left and	d Right buttons.		
► ALC : Select Auto In	ris Lens (MODE: INDOOF	R / OUTDOOR)		
► ELC : Select Manual	l Lens			
FOCUS ADJ				
1. When the SETUP m	enu screen is displayed, us	ing the Up and Down butto	ons	
so that the yellow b	ar indicates 'FOCUS ADJ'.			
2. Select a ON/OFF me	ode using the Left and Rigl	nt buttons.		
- FOCUS AREA	: WIDE / MIDDLE / N	ARROW		
- DISP TONE	: 0 ~ 2			
- DISP H_POS	: 0 ~ 60	+	11	
- DISP V_POS	: 0 ~ 34	POSITION +	+ SIZE	*
- DISP H_SIZE	: 0 ~ 60	+	140	
- DISP V_SIZE	: 0 ~ 34			

1. When the SETUP me	nu screen is displayed, using the Up and Down buttons
so that the yellow ba	r indicates 'EXPOSURE'.
2. Select the connected t	ype by using SET buttons.
▶ BRIGHTNESS : 0	~ 20
,	You can control the brightness by using the Left and Right button.
▶ SHUTTER : AUT	D / FLICKER / MANUAL
- AUTO : Select this	s mode to control the shutter speed automatically.
Shutter s	peed is automatically controlled depending on the brightness of the screen.
IRIS (ALC) - OU	TDOOR / INDOOR / DEBLUR
IRIS (ELC) - NO	RMAL / DEBLUR
- FLK : Select this v	vhen you experience picture flicker,
this happen	when there is a clash with the installed lighting frequency.
- MANUAL : SPEE	D 1/30(25) ~ 30000(25600)
► SENS-UP : OFF /	x2~x32
When	it is night of dark, the camera automatically detects the light level and
main	tains a clear picture.
► AGC : 0 ~ 10	
The higher	the gain level, the brighter the screen but the greater the noise.
DACKLIGHT	
1. When the SETUP me	mu screen is displayed, using the Up and Down buttons
 When the SETUP me so that the yellow ba 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'.
 When the SETUP me so that the yellow ba Select the connected to 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons.
 When the SETUP me so that the yellow ba Select the connected to 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons.
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time,
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this function 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image.
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functional the second s	nu sereen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functi MODE WINDOW ZONE 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI E: 0 ~ 3
 When the SETUP me so that the yellow ba Select the connected 1 WDR : If there are this functi MODE WINDOW ZONE WINDOW USE WINDOW USE 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI :: ON / OFF
 When the SETUP me so that the yellow ba Select the connected I WDR : If there are this functi MODE WINDOW ZONE WINDOW USE H-POS W poc 	 nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : 0 ~ 3 : ON / OFF : 0~ 1920 . 1920
 When the SETUP me so that the yellow ba Select the connected the sense of the sense	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI 5: 0 ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 POSITION
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functi MODE WINDOW ZONE WINDOW USE H-POS V-POS H-SIZE 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI :: O ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 * 0 ~ 1920
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functi MODE WINDOW ZONI WINDOW USE H-POS V-POS H-SIZE V-SIZE 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : 0 ~ 3 : 0 ~ 1920 : 0 ~ 1080 * 0 ~ 1920 : 0 ~ 1080
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functi MODE WINDOW ZONI WINDOW USE H-POS V-POS H-SIZE V-SIZE WEIGHT 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : ON / OFF : 0 ~ 1920 : 0 ~ 1080 : 0 ~ 1920 : 0 ~ 1080 : LOW / MIDDLE / HIGH
 When the SETUP me so that the yellow ba Select the connected t WDR : If there are this functi MODE WINDOW ZONE WINDOW USE H-POS V-POS H-SIZE V-SIZE WEIGHT BLC : This function 	nu sereen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : 0 ~ 3 : 0N / OFF : 0 ~ 1920 : 0 ~ 1080 : 0 ~ 1920 : 0 ~ 1080 : LOW / MIDDLE / HIGH on allows you to get a clear pictures of objects even the objects in strong backlight.
 When the SETUP me so that the yellow ba Select the connected f WDR : If there are this functi MODE WINDOW ZONE WINDOW USE H-POS V-POS H-SIZE V-SIZE WEIGHT BLC : This functio Enables a 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : O ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 : LOW / MIDDLE / HIGH on allows you to get a clear pictures of objects even the objects in strong backlight. user to directly select a desired area from a picture, and to view the area more clearly.
 When the SETUP me so that the yellow ba Select the connected I WDR : If there are this functic MODE WINDOW ZONF WINDOW USE H-POS V-POS H-SIZE V-SIZE VEIGHT BLC : This functic Enables a H-POS 	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI 2: 0 ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 : 0 ~ 1080 : LOW / MIDDLE / HIGH nallows you to get a clear pictures of objects even the objects in strong backlight. user to directly select a desired area from a picture, and to view the area more clearly. : 0 ~ 20
 When the SETUP me so that the yellow ba Select the connected the sense of the sense	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI E: 0 ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 : LOW / MIDDLE / HIGH on allows you to get a clear pictures of objects even the objects in strong backlight. user to directly select a desired area from a picture, and to view the area more clearly. : 0 ~ 20
 When the SETUP me so that the yellow ba Select the connected the sense of the sense	nu screen is displayed, using the Up and Down buttons r indicates 'BACKLIGHT'. ype by using Left and Right buttons. bright area and dark area on the screen at the same time, on makes both areas to be in Natural clear image. : NORMAL / ROI : O ~ 3 : ON / OFF : 0 ~ 1920 : 0 ~ 1080 : LOW / MIDDLE / HIGH on allows you to get a clear pictures of objects even the objects in strong backlight. user to directly select a desired area from a picture, and to view the area more clearly. : 0 ~ 20 : 0 ~ 20

 HLC : If there is a 	high light installe	ed in a limited o	environment such as	an apartment parking garage or
gas station er	ntrance, removing	g the hight light	makes it possible to	view car license plates efficiently.
- LEVEL	$: 0 \sim 20$			
- COLOR	: WHT / YEL	/ CYN / GRN	/ MAG / RED / BLU	/ BLK / CUSTOMIZE
		HLC OFF		HLC ON
DAY&NIGHT				
 You can display pic 	tures in Color or l	Black and Whi	te.	
1. When the SETUP me	enu screen is disp	layed, using th	e Up and Down butt	ons
so that the yellow ba	ar indicates 'DAY	&NIGHT'.		
2. Select the connected	type by using Lef	ft and Right bu	ttons.	
► AUTO : The mode	is switched to 'CO	OLOR' mode ir	a normal environme	ent, but switches to 'B/W' mode
when an	bient illuminatio	n is low.		
To set up	p the function typ	e for AUTO m	ode, press the Functi	on Setup switch.
- IR LED	: ON / OFF			
- ANTI-SAT.	$: 0 \sim 20$			
- AGC THRES	: 0 ~ 20			
- AGC MARGIN	: 0 ~ 20			
- DELAY	: LOW / MIDI	DLE / HIGH		
 COLOR : The picture 	ire is always disp	layed in COLC	OR mode.	
BW : The picture is	always displayed	d in B/W mode		
To set up th	e B/W setting, pr	ress the Functio	on setup switch.	
- IR LED	: ON / OFF			
- ANTI-SAT.	$: 0 \sim 20$			
► EXTERN : DAY&	NIGHT control fi	unction by exte	rnal signal. (Not ava	ilable for this product.)
- IR LED	: ON / OFF		- ANTI-SAT.	: 0 ~ 20
- IR LED	: LOW / HIGH	ł	- D>N THRES	: 0 ~ 20
- N>D THRES	: $0 \sim 20$		- DELAY	: LOW / MIDDLE / HIGH
COLOR				
1. When the SETUP me	enu screen is disp	layed, using th	e Up and Down butt	ons
so that the yellow ba	r indicates 'COL	OR'.		
2. Select the connected	type by using SE	T buttons		
- AWB	:	AUTOext / PR	ESET / MANUAL /	AUTO

- COLOR GAIN

- MAIN OUTPUT

ANALOG OUTPUT0

: 0 ~ 20

: ANALOG OUT0 / ANALOG OUT1 / SDI OUTPUT

: TVI / AHD / CVI / CVBS / OFF

MOTION		
 This product has a feature 	ature that allows you to observe movement of objects,	7
and the special words	s appear on the screen when movement is detected.	
You can monitor acti	vity more efficient.	
1. When the SETUP mer	nu screen is displayed, using the Up and Down buttons	
so that the yellow bar	r indicates 'MOTION'.	
2. Select a ON/OFF mod	de using the Left and Right buttons.	
► DET WINDOW		
- WINDOW ZONE	1 : 0 ~ 3	
- WINDOW USE	: ON / OFF	
- DET H-POS	: 0 ~ 60	
- DET V-POS	: 0 ~ 34	
- DET H-SIZE	:0~60 + POSITION + + SIZE +	
- DET V-SIZE	: 0 ~ 34	
- DET TONE	: 0 ~ 4	
- MDRECT FILL	: ON / OFF	
- SENSITIVITY	: 0 ~ 10	
- MOTION OSD	: ON / OFF	
- TEXT ALARM	: ON / OFF	
- SIGNAL OUT	: ON / OFF	
SYSTEM		
1. When the SETUP mer	nu screen is displayed, using the Up and Down buttons	
so that the yellow bar	r indicates 'SYSTEM'.	
2. Select the connected ty	ype by using SET buttons	
► OUTPUT		
- MAIN OUTPUT	: ANALOG OUT0 / ANALOG OUT1 / SDI OUTPUT	
💥 The basic setti	ing is ANALOG OUTPUT0. Please do not change the setting.	
- SDI OUTPUT	: EX-SDI 2.0 / EX-SDI 1.0 / HD-SDI / OFF	
- ANALOG OUT0	: TVI / AHD / CVI / CVBS / OFF	
- Y GAIN	: 0 ~ 32	
- CB GAIN	: 0 ~ 255	
- CR GAIN	: 0 ~ 255	
- POSITION	: 0 ~ 255	
- BURST FREQ	: 0 ~ 255	
- BURST GAIN	: 0 ~ 128	
- B&W	: BURST ON / OFF	
- UCC SELECT	: 8 BYTE / 10BYTE	
- 720 EX	: ON / OFF	
- ANALOG OUT1	: CVBS / OFF	

6 DNR This function reduces the background noise in a low luminance environment. 1. When the SETUP menu screen is displayed, using the Up and Down buttons so that the yellow bar indicates 'DNR'. 2. Select the connected type by using Left and Right buttons. ► LEVEL : OFF / LOW / MIDDLE / HIGH IMAGE 1. When the SETUP menu screen is displayed, using the Up and Down buttons so that the yellow bar indicates 'IMAGE'. 2. Select the connected type by using SET buttons ► SHARPNESS : As you increase this value, the picture outline becomes stronger and clearer Adjust this value appropriately depending on the sharpness of the picture. - MAIN OUTPUT : SDI OUTPUT / ANALOG OUT0 / ANALOG OUT1 - SDI OUTPUT : HD-SDI / EX-SDI 1.0 / EX-SDI 2.0 / OFF - SDI & CVBS : 0 ~ 10 - CVI $:0\sim 10$ - TVI $:0\sim 10$ - AHD : 0 ~ 10 ▶ GAMMA : 0.45 / 0.55 / 0.65 / 0.75 MIRROR : You can flip the picture Horizontally Rotationally on the screen. • FLIP : You can flip the picture Vertically Rotationally on the screen. ► ACE : OFF / LOW / MIDDLE / HIGH · DEFOG : Images in extraordinary environment such as fog or rain or in a very strong luminous intensity have DR(dynamic range), lower than ordinary image. Contrast-based defog function, which is used to overcome such shortcoming. - MODE : AUTO / MANUAL - LEVEL : LOW / MIDDLE / HIGH · PRIVACY : Mask an area you want to hide on the screen. - ZONE NUM : 0 ~ 15 - ZONE DISP : ON / OFF - H-POS : 0 ~ 60 - V-POS : 0 ~ 34 SIZE - H-SIZE : 0 ~ 60 POSITION - V-SIZE : 0 ~ 34 - Y LEVEL $:0\sim 20$ - CB LEVEL $:0\sim 20$ - CR LEVEL $: 0 \sim 20$ - TRANS :0~3

► FRAME RATE	: 720 25P / 720 50P / 1080 25P
► FREQ	: 50HZ / 60HZ
► COM.	: This function sets up the camera communication status when controlling
	the camera through an external device.
	You can control SETUP Menu through this port by using external controllers like a re-
	controller that RS-485 communication is supported.
- CAM ID	: 0 ~ 255
- BAUDRATE	: 2400 / 4800 / 9600 / 57600 / 115200
- SET DONE	: ON
► IMAGE RANGE	: FULL / COMP / USER
- OFFSET	: 0 ~ 32
► COLOR SPACE	: HD-CbCr / SD-CbCr / YUV
► AUDIO MIC	: NOT USED
► COLOR BAR	: ON / OFF
► LANGUAGE	: You can select the menu language according to your requirement.
- Supplied Langua	ge : English, Chinese, Chinese(S), Japanese, Korean
► CAM TITLE	: If you enter a title, the title will be appear on the monitor.
(Notes) (Notes) (Or the CAN (A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location.
(Notes) (Notes) (Output (Content)) (Output (Conten)) (Output (Content)) (Output (Content)) (Output (Content)) (Output (Conten)) (Output	1 TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you end and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP
Notes Owhen the CAM One. Owhen the CAM One. Output Owhen the left - LEFT DOWN / F Owhen the Up&Down I	1 TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons
① Vou can use the left - LEFT DOWN / F ② Use the Up&Down / to move to a desired	1 TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position.
(Notes) (Notes) (Or the CAN (One) (1 TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons l position. multiple letters. You can enter up 8 letters.
Notes Notes Other the CAN one. Vou can use the left LEFT DOWN / F Use the Up&Down l to move to a desired Repeat this to enter When the 'CAM TIT	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP Duttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. FLE' input is completed, press the SET button to finish.
(Notes) (Notes) (Or When the CAM (Or	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. rLE' input is completed, press the SET button to finish. e camera settings to the factory defaults.
(Notes) (Notes) (Or When the CAN (One) (One) (One) (Does the Up&Down I to move to a desired (One) (One)	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. FLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds.
Notes Notes Other the CAN One. Vou can use the left LEFT DOWN / F Use the Up&Down to move to a desiree When the 'CAM TIT • RESET : Resets th The SET EXIT	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. tIGHT UP buttons to select the desired letter and use the Left&Right buttons l position. multiple letters. You can enter up 8 letters. TLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds.
Notes Notes Other the CAN One. Other the CAN one. Use the Up&Down I to move to a desired When the CAM TIT FRESET : Resets th The SET EXIT I. When the SETUP mm	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. UGHT UP outtons to select the desired letter and use the Left&Right buttons l position. multiple letters. You can enter up 8 letters. I'LE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds.
Notes Notes Other the CAN One. Other the CAN one. Use the Up&Down I to move to a desired When the 'CAM TTT NESET : Resets th The SET EXIT Nwhen the SETUP mm so that the yellow bi	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP outtons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. I'LE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. must screen is displayed, using the Up and Down buttons r indicates 'EXIT'.
(Notes) () When the CAM one. () You can use the left - LEFT DOWN / F (2) Use the Up&Down I to move to a desired (3) Repeat this to enter (4) When the CAM TT • RESET : Resets th The SET EXIT 1. When the SETUP m so that the yellow b 2. Select the connected	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. ILE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons tr indicates 'EXIT'. type by using Left and Right buttons.
 Notes When the CAN one. You can use the left LEFT DOWN / F Use the Up&Down I to move to a desired Repeat this to enter When the CAM TIT RESET : Resets th The SET EXIT 1. When the SETUP may so that the yellow bag 2. Select the connected 	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. fLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. =mu screen is displayed, using the Up and Down buttons tr indicates 'EXIT'. type by using Left and Right buttons.
(Notes) (Notes) (O) When the CAM (one. () You can use the left - LEFT DOWN / F (2) Use the Up&Down I to move to a desired (3) Repeat this to enter (4) When the CAM TIT • RESET : Resets th The SET EXIT 1. When the SETUP ma so that the yellow ba 2. Select the connected • EXIT : After sett	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. fLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons ir indicates 'EXIT'. type by using Left and Right buttons. ing the function, use the LEFT / RIGHT button on the EXIT menu
Notes When the CAM one. When the CAM one. Use the Up&Down I to move to a desired When the 'CAM TIT RESET : Resets th The SET I. When the SETUP mm so that the yellow ba 2. Select the connected EXIT : After sett to display	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP bouttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up & letters. fLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons ir indicates 'EXIT'. type by using Left and Right buttons. ing the function, use the LEFT / RIGHT button on the EXIT menu 'Save or Cancel and press the SET button.
(Notes) (Notes) (O) When the CAN (One. (D) Vou can use the left - LEFT DOWN / F (2) Use the Up&Down l to move to a desired (3) Repeat this to enter (4) When the 'CAM TTI • RESET : Resets th The SET EXIT 1. When the SETUP mm so that the yellow ba 2. Select the connected • EXIT : After sett to display (Notes)	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP bouttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. FLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons wi indicates 'EXIT'. type by using Left and Right buttons. ing the function, use the LEFT / RIGHT button on the EXIT menu 'Save or Cancel and press the SET button.
(Notes) (Notes) (O) When the CAN (One. (D) Vou can use the left - LEFT DOWN / F (2) Use the Up&Down l to move to a desired (3) Repeat this to enter: (4) When the 'CAM TIT (4) When the 'CAM TIT (5) Notes (7) Notes (7) You can use t	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. RIGHT UP buttons to select the desired letter and use the Left&Right buttons I position. multiple letters. You can enter up 8 letters. FLE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons ir indicates 'EXIT'. type by using Left and Right buttons. ing the function, use the LEFT / RIGHT button on the EXIT menu 'Save or Cancel and press the SET button.
Notes Notes When the CAN One. When the CAN One. LEFT DOWN / F Use the Up&Down l to move to a desired When the 'CAN TTI When the 'CAN TTI When the CAN TTI Nore the 'CAN TTI When the SETUP m so that the yellow be Select the connected EXIT : After sett to display Notes O You can use t	A TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you en and right buttons to display 'CAM TITLE' at the desired location. UGHT UP outtons to select the desired letter and use the Left&Right buttons 1 position. multiple letters. You can enter up 8 letters. I'LE' input is completed, press the SET button to finish. e camera settings to the factory defaults. button must be pressed for more than 2 seconds. enu screen is displayed, using the Up and Down buttons ir indicates 'EXIT'. type by using Left and Right buttons. ing the function, use the LEFT / RIGHT button on the EXIT menu 's ave or Cancel and press the SET button. he 'RETURN' function to return to the submenu. save or cancel using the left and right buttons after placing the yellow bar BW' lowed of the ardher and the submenu.